

COOKER HOOD

GDK 2382 XB



EN

FOR A GOOD REASON

GRUNDIG



Please read this user manual first!

Dear Customer,

Thank you for purchasing this Grundig product. We hope that you get the best results from your product which has been manufactured with high quality and state-of-the-art technology.

Therefore, please read this entire user manual and all other accompanying documents carefully before using the product and keep it as a reference for future use. If you handover the product to someone else, give the user manual as well. Follow all warnings and information in the user manual.

Remember that this user manual is also applicable for several other models. Differences between models will be identified in the manual.

Please visit the "Support" section on the Grundig website www.grundig.co.uk to register your 5 year warranty.


Grundig Helpline

0845 603 1234

0345 603 1234

TABLE OF CONTENTS

1 Safety and set-up	6-7
<hr/>	
2 At a glance	8
<hr/>	
Control, parts and accessories	8
3 Operation	9-12
<hr/>	
Wall drilling and bracket fixing	9
Mounting the hood body	9
Connections ducted version	
air exhaust system	9
Recirculation version air outlet	10
Electrical connection	10
Chimnet assembly	10
Upper exhaust chimney	10
Lower exhaust chimney	10
Grease filters	12
Cleaning metal self-supporting grease filters	12
Activated charcoal filter	10
Activated charcoal filter (Recirculation version)	12
Replacing the activated charcoal filter	12
Light replacement	12
4 Information	13
<hr/>	
Technical data	13
Environmental note	13
5 Guarantee	14
<hr/>	
6 Service	15
<hr/>	

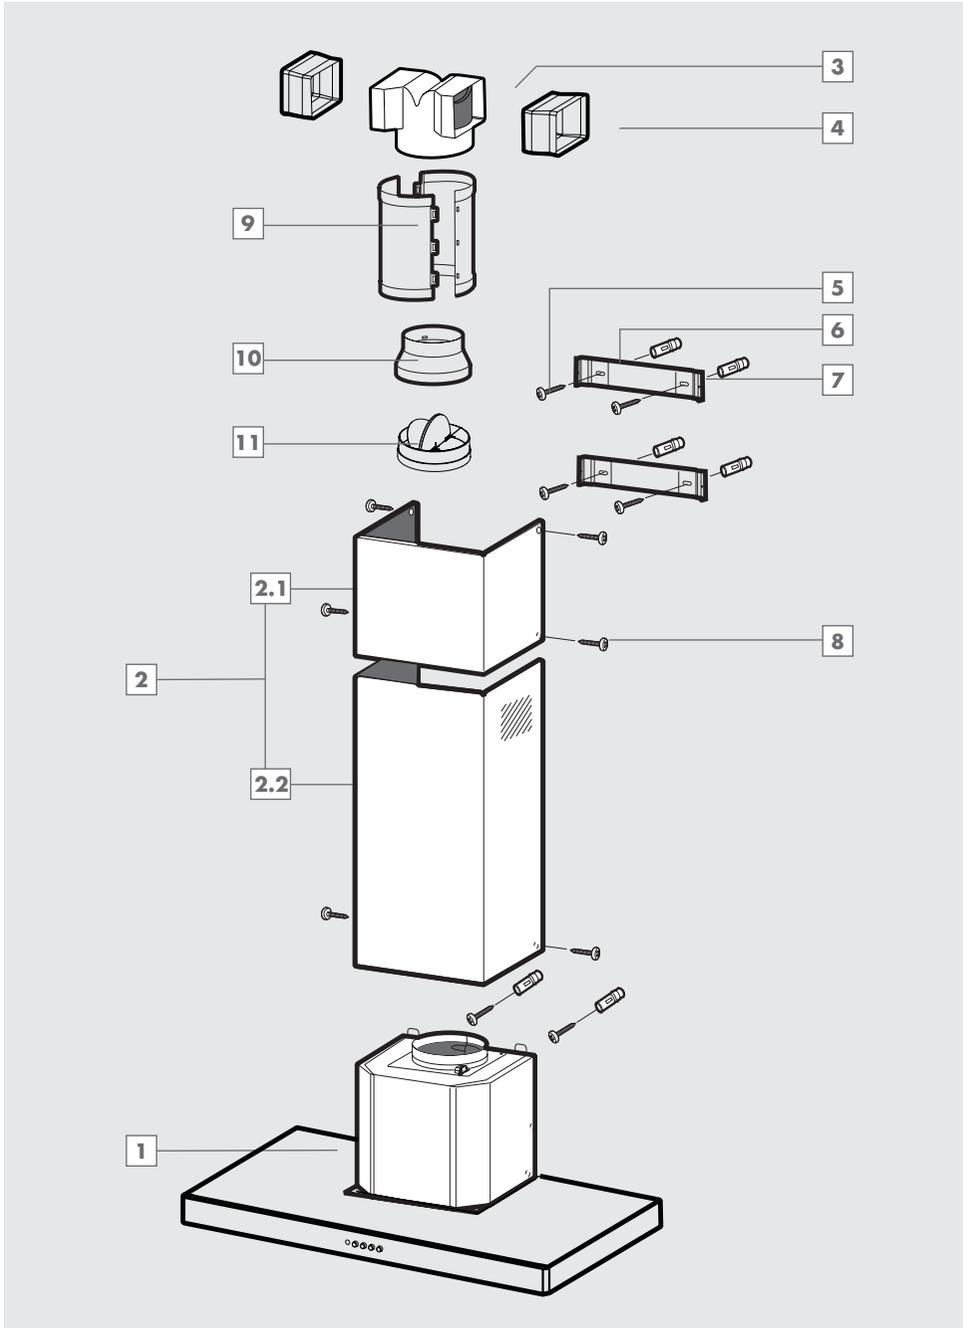


SAFETY AND SET-UP

The Instructions for Use apply to several versions of this appliance. Accordingly, you may find descriptions of individual features that do not apply to your specific appliance.

Installation

- The manufacturer will not be held liable for any damages resulting from incorrect or improper installation.
- The minimum safety distance between the cooker top and the extractor hood is 650 mm (some models can be installed at a lower height, please refer to the paragraphs on working dimensions and installation).

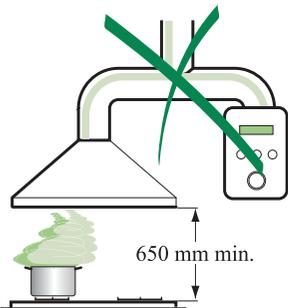

- Check that the mains voltage corresponds to that indicated on the rating plate fixed to the inside of the hood.

- For Class I appliances, check that the domestic power supply guarantees adequate earthing. Connect the extractor to the exhaust flue through a pipe of minimum diameter 120 mm. The route of the flue must be as short as possible.
- Do not connect the extractor hood to exhaust ducts carrying combustion fumes (boilers, fireplaces, etc.).
- If the extractor is used in conjunction with non-electrical appliances (e.g. gas burning appliances), a sufficient degree of aeration must be guaranteed in the room in order to prevent the backflow of exhaust gas. The kitchen must have an opening communicating directly with the open air in order to guarantee the entry of clean air.

Use


- The extractor hood has been designed exclusively for domestic use to eliminate kitchen smells.
- Never use the hood for purposes other than for which it has been designed.

SAFETY AND SET-UP

- Never leave high naked flames under the hood when it is in operation.
- Adjust the flame intensity to direct it onto the bottom of the pan only, making sure that it does not engulf the sides.
- Deep fat fryers must be continuously monitored during use: overheated oil can burst into flames.
- Do not flambè under the range hood; risk of fire.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Children should be supervised to ensure that they do not play with the appliance.

Maintenance

- Switch off or unplug the appliance from the mains supply before carrying out any maintenance work.
- Clean and/or replace the Filters after the specified time period (Fire hazard).
- Clean the hood using a damp cloth and a neutral liquid detergent.

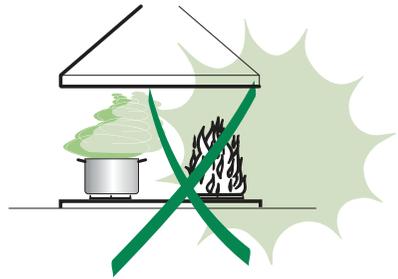

AT A GLANCE

Control, parts and accessories


See the figure on page 3.

- 1 Hood Body, complete with: Controls, Light, Blower, Filters
- 2 Telescopic Chimney comprising:
 - 2.1 Upper Section
 - 2.2 Lower Section
- 3 Air Outlet Connection
- 4 Air Outlet Connection Extension
- 5 Screws 4,2 x 44,4
- 6 Upper Chimney Section Fixing Brackets
- 7 Wall Plugs
- 8 Screws 2,9 x 9,5
- 9 Hood Body Air Outlet Extension Piece consisting of two Half Shells
- 10 Reducer Flange \varnothing 150-120 mm
- 11 Damper

	GDK 2382 XB
Depth	345 mm
Width	598 mm
Min Height	730-1060 mm
Supply voltage	220-240 Volt ~ 50 Hz
Control	4 positions
Suction power	355/550/640/740 m ³
Motor power	275 W
Lamp power	2x20 W
Total power	315 W
Fuse	150 mm
Air outlet pipe diameter	120-150 mm
Net weight	11,7 kg
Gross weight	16.3 kg
Color	Inox

OPERATION

Wall drilling and bracket fixing

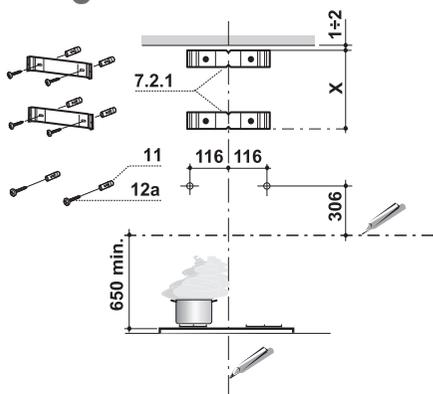


Wall marking:

- Draw a vertical line on the supporting wall up to the ceiling, or as high as practical, at the centre of the area in which the hood will be installed.
- Draw a horizontal line at 650 mm above the hob. Place bracket [6] Screws 2,9 x 9,5 on the wall as shown about 1-2 mm from the ceiling or upper limit aligning the centre (notch) with the vertical reference line.
- Mark the wall at the centres of the holes in the bracket.
- Place bracket [6] on the wall as shown at X mm below the first bracket (X = height of the upper chimney section supplied), aligning the centre (notch) with the vertical line.
- Mark the wall at the centres of the holes in the bracket.
- Mark a reference point as indicated at 116 mm from the vertical reference line and 306 mm above the horizontal reference line.
- Repeat this operation on the other side.
- Drill $\varnothing 8$ mm holes at all the centre points marked.
- Insert the wall plugs [7] in the holes.
- Fix the brackets using the [8] (4,2 x 44,4) screws supplied.

- Insert the two screws [8] (4,2 x 44,4) supplied in the hood body fixing holes, leaving a gap of 5-6 mm between the wall and the head of the screw.

Mounting the hood body

- Before attaching the hood body, tighten the two screws Vr located on the hood body mounting points.
- Hook the hood body onto the screws [8].
- Fully tighten the support screws [8].
- Adjust the screws Vr to level the hood body.

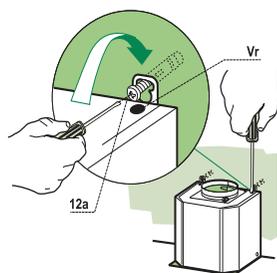


Connections

Ducted Version Air Exhaust System

When installing the ducted version, connect the hood to the chimney using either a flexible or rigid pipe $\varnothing 150$ or 120 mm, the choice of which is left to the installer.


- To install a $\varnothing 120$ mm air exhaust connection, insert the reducer flange [9] on the hood body outlet.
- Fix the pipe in position using sufficient pipe clamps (not supplied).
- Remove possible charcoal filters.

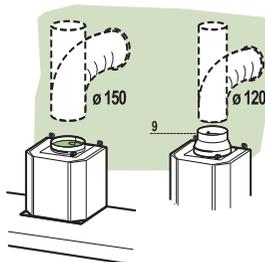

OPERATION


Recirculation Version Air Outlet

- Assemble the two halves of the hood body extension piece 14.
- Push fit the assembled hood body extension piece 14 onto the air outlet.
- Push fit connection 15 onto the hood body extension piece 14.
- Insert the connection extension pieces laterally 14.1 in connection 15.
- Make sure that the outlet of the extension pieces 14.1 is horizontally and vertically aligned with the chimney outlets.
- If this is not the case, adjust the position by either reversing the connection extension pieces 14.1 or by cutting the hood body extension 14 along one of the thinner section channels denoting the prefixed lengths, then reassemble as described previously.
- Ensure that the activated charcoal filters have been inserted.

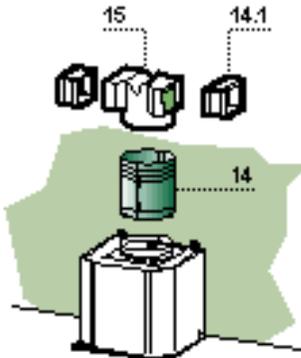


Electrical Connection

- Connect the hood to the mains through a two-pole switch having a contact gap of at least 3 mm.
- Remove the grease filters (see paragraph Maintenance) being sure that the connector of the feeding cable is correctly inserted in the socket placed on the side of the fan.

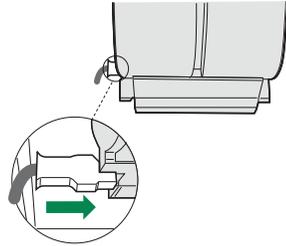

Chimney assembly

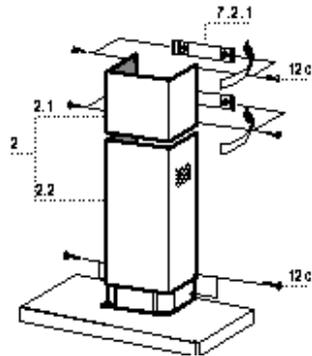


Upper exhaust Chimney

- Slightly widen the two sides of the upper chimney and hook them behind the brackets **6**, making sure that they are well seated.
- Secure the sides to the brackets using the 4 screws **8** (2,9 x 9,5) supplied.

Lower exhaust Chimney

- Slightly widen the two sides of the chimney and hook them between the upper chimney and the wall, making sure that they are well seated.
- Fix the lower part laterally to the hood body using the 2 screws **8** (2,9 x 9,5) supplied.


OPERATION

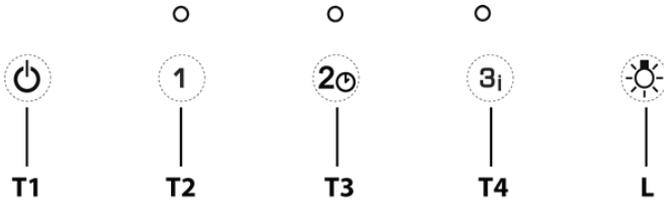


Control Panel		
The hood can be switched on pushing directly onto the requested speed without firstly having to select 0/1 button.		
Key	Led	Functions
T1	–	Turns the motor off.
T2	Speed	Turns the motor on at speed one.
T3	Speed	Turns the motor on at speed two.
	The relevant speed LED flashes once	Press and hold for 2 seconds to switch on and off the function Delay. Enable the automatic switch off (motor+lights) delayed of 30 seconds. Useful to remove residual smells. It can be activated when the Intensive speed is turned off; it turns off pressing the button or switching the motor off.
T4	Fixed	Turns the motor on at speed three.
	Flashing twice per second	Turns the function Intensive on and off. This speed is timed to run for 10 minutes. At the end of this time, the system returns automatically to the speed that was set before. It turns off pressing the button or switching the motor off. It can't be activated when the Delay is turned on.
L	–	Turns the lights on/off at maximum strength

OPERATION

Grease Filters

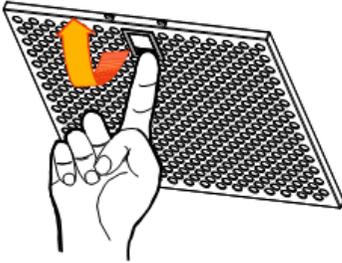

- Fit the new filter by hooking it into its seating.
- Refit the metal grease filters.

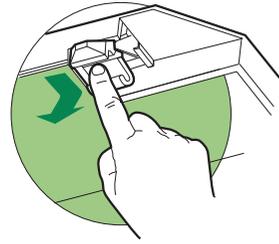


Cleaning Metal Self-Supporting Grease Filters

- The filters must be cleaned every 2 months of operation, or more frequently for particularly heavy usage, and can be washed in a dishwasher.
- Remove the filters one at a time holding them up with one hand and pulling the handle downwards with the other hand at the same time.
- Wash the filters, taking care not to bend them. Allow them to dry before refitting.
- When refitting the filters, make sure that the handle is visible on the outside.

Activated Charcoal Filter (Recirculation Version) Replacing The Activated Charcoal Filter

- The filter is not washable and cannot be regenerated, and must be replaced approximately every 4 months of operation, or more frequently for particularly heavy usage.
- Remove the metal grease filters.
- Remove the saturated activated carbon filter by releasing the fixing hooks.

Lighting Light Replacement 20 W Halogen Light.

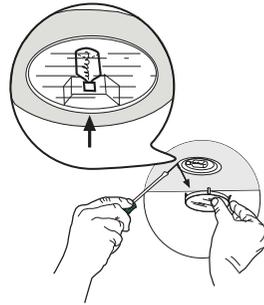

- Remove the snap-on lamp cover by levering it from under the metal ring, supporting it with one hand.
- Remove the halogen lamp from the lamp holder by pulling gently.
- Replace the lamp with a new one of the same type, making sure that you insert the two pins properly into the housings on the lamp holder.
- Replace the snap-on lamp cover.

INFORMATION

Technical data



This product conforms to European Directives 2004/108/EC, 2006/95/EC, 2009/125/EC and 2011/65/EU.

Power supply

Operating voltage:

220-240V~, 50Hz 220 V~, 60 Hz

Technical and design modifications reserved!

Environmental note



The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

GUARANTEE

Guarantee for Refrigeration, Cooking Appliance, Washing Machines & Dishwashers

Your new Grundig product is guaranteed against the cost of breakdown repairs for 5 years from the date of the original purchase.

“Please visit the “support” section on the Grundig website at www.grundig.co.uk to register your 5 year warranty.

What is covered?

- Repairs necessary as a result of faulty materials, defective components or manufacturing defect.
- The cost of functional replacement parts, but excluding consumable items.
- The labour costs of a Grundig approved repairer to carry out the repair.

What is not covered?

- Transit, delivery or accidental damage or misuse and abuse.
- Cabinetry or appearance parts, including knobs, knobs, handles or container lids.
- Accessories or consumable items including but not limited to, ice trays, scrapers, cutlery baskets, filters and light bulbs.
- Repairs required as a result of unauthorised repair or incorrect installation that fails to meet the requirements contained in the user instruction book.
- Repairs to products used on commercial or non residential household premises.
- Loss of frozen food in freezers or fridge/freezers. (Food loss insurance is often included within your household contents insurance policy, or may be available separately from your retailer.)

Important notes

- Your Grundig product is designed and built for domestic household use only.
- The guarantee will be void if the product is installed or used in commercial or non-residential domestic household premises.
- The product must be correctly installed, located and operated in accordance with the instructions contained in the User Instructions Booklet provided.
- Professional installation by a qualified Electrical Domestic Appliance Installer is recommended for all Washing Machines, Dishwashers and Electric Cookers
- Gas Cookers must only be installed by a Gas Safe (or BORD GAIS) registered Gas Installer.
- The guarantee is given only within the boundaries of the United Kingdom and the Republic of Ireland.
- The guarantee is applicable only to new products and is not transferable if the product is resold.
- Grundig disclaims any liability for incidental or consequential damages.
- The guarantee does not in anyway diminish your statutory or legal rights.

Should you experience any difficulty in obtaining service please contact the Grundig Customer Helpline.

Tel : 0845 603 1234

0345 603 1234

e-mail : service@Grundig.co.uk

Service

Please keep your purchase receipt or other proof of purchase in a safe place; you will need to have it should the product require attention under guarantee.

You should also complete the details below; it will help us assist you when requesting service. (The model number is printed on the Instruction Booklet and the serial number is printed on the Rating Label affixed to the appliance)

Model No:

Serial No:

Retailer:

Date of purchase:

For service under guarantee simply telephone the appropriate number below UK Mainland & Northern Ireland

0845 603 1234

0345 603 1234

Republic of Ireland

All Refrigeration, All Cookers

Washing Machines and Dishwashers

01 862 34 11

Before requesting service please check the trouble- shooting guide in the Operating Instructions as a charge may be levied where no fault is found even though your product may still be under guarantee. Service once the manufacturers guarantee has expired.

If you have purchased an extended guarantee please refer to the instructions contained within the extended guarantee agreement document. Otherwise please call the appropriate number above where service can be obtained at a charge.

Grundig, 1 Greenhill Crescent, Watford Herts WD18 8QU

FOR A GOOD REASON
GRUNDIG