


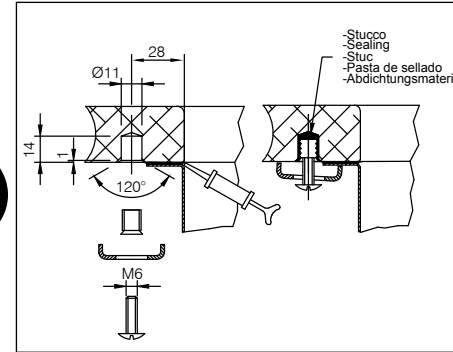
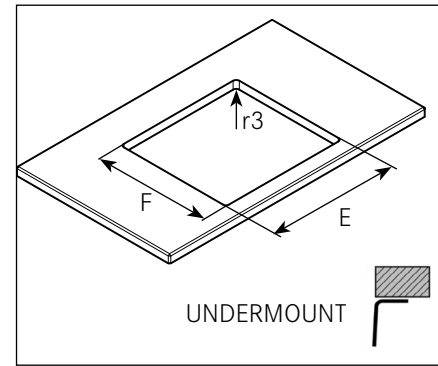
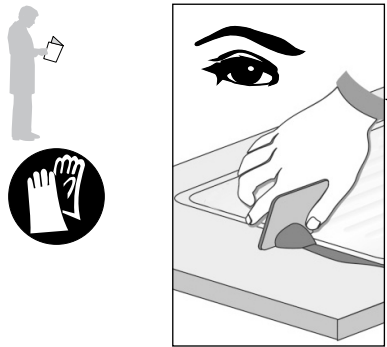
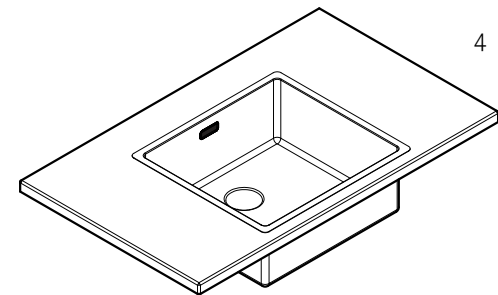
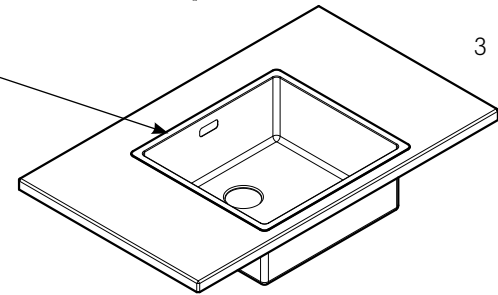
 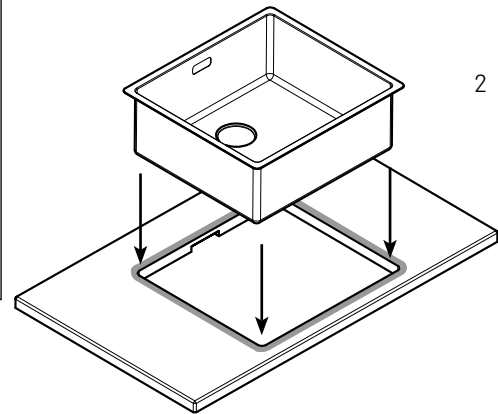



INSTRUCTION MANUAL

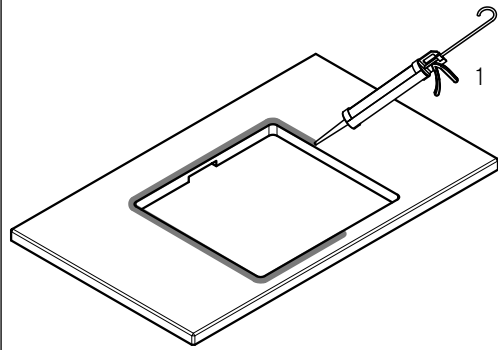







DECA 50

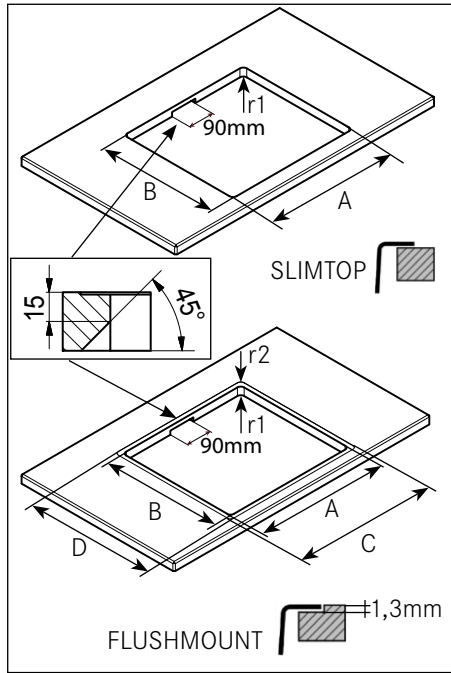



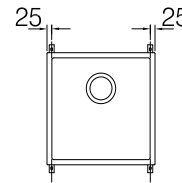

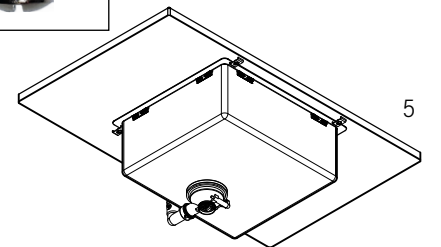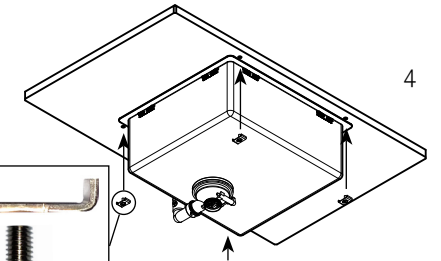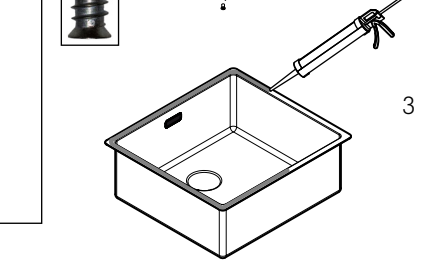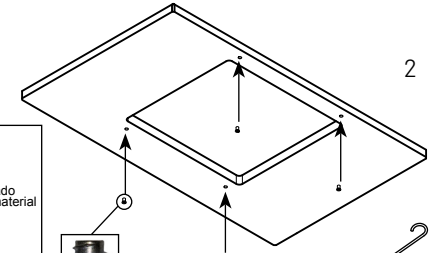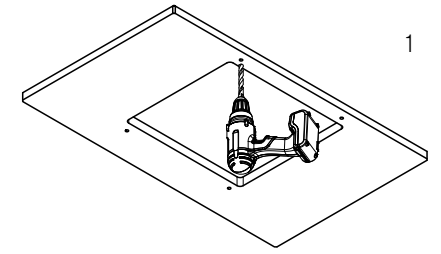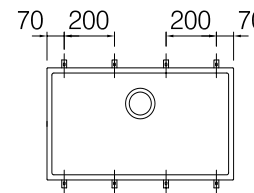

DECA 100
DECA 105
DECA 150
DECA 150



DECA XL



Modello	A	B	C	D	E	F	r1	r2	r3
DECA 50 	170	420	202	452	160	410	0-10	14	12
DECA 100 	370	420	402	452	360	410	0-10	14	12
DECA 105 	510	420	542	452	500	410	0-10	14	12
DECA 150 	530	420	562	452	520	410	0-10	14	12
DECA150 	530	420	562	452	520	410	0-10	14	12
DECA XL 	695	420	727	452	685	410	0-10	14	12



how to uninstall



comment désinstaller

zur Deinstallation

cómo desinstalar

come disinstallare

